

Kodak

I N S T A M A T I C

800

C A M E R A

KODAK

INSTAMATIC

800

CAMERA

Your KODAK INSTAMATIC 800 Camera is the most distinguished member of the KODAK INSTAMATIC family. In addition to its instant-loading feature, fine $f/2.8$ lens, electric-eye exposure and automatic flash exposure controls, it provides *rangefinder focusing* and *automatic film advance*.

Simply do this . . .

- Drop in KODAPAK Cartridge—camera is loaded
- Wind Spring-Power Motor—first exposure is ready
- Look through Viewfinder and adjust Rangefinder—camera is focused
- Compose picture and press Shutter Release—you've taken the picture

. . . read on for the details



◀ Your camera takes all three—

- 1 Black-and-white snapshots
- 2 Color snapshots
- 3 Color slides

Kodachrome TRANSPARENCY



PROCESSED BY

Kodak

Before making any important pictures—of a trip or some special event—it is well to shoot a cartridge of film outdoors, and indoors with flash. This will give you practice in camera operation and provide a check on your equipment.

KODAK VERICHROME Pan Film, VP 126 ►

FILM

Your camera accepts all KODAK No. 126 Films in the KODAPAK Cartridge for instant camera loading and unloading.

You can make black-and-white snapshots, color snapshots, or color slides, depending on which film type is loaded in the camera.

KODACOLOR-X Film, CX 126 ►

KODACHROME-X Film, KX 126 ►

KODAK EKTACHROME-X Film, EX 126 ►

NOTE: Storing the camera with the motor fully wound does not weaken the spring. If, after a cartridge has been removed from the camera, the shutter release is pressed, the spring tension is released. For the spring motor to again retain power, a cartridge must be loaded in the camera.

For 12 black-and-white snapshots. Standard enlarged black-and-white prints from your negatives are $3\frac{1}{2}$ x $3\frac{1}{2}$ inches in size. Bigger enlargements are also available.

For 12 color snapshots. Standard enlarged color prints are $3\frac{1}{2}$ x $3\frac{1}{2}$ inches in size. Color slides, as well as bigger color enlargements, are also available.

For 20 color slides. These color pictures on film are framed in 2 x 2-inch mounts, for showing in slide projectors.

For 20 color slides. Can be processed by the user or by a laboratory. These color pictures on film are usually framed in 2 x 2-inch mounts, for showing in slide projectors.

Films, processing, printing, and mounting service, can be obtained from your photo dealer.

NOTE:

You always obtain color negatives from KODACOLOR-X Film. These negatives are primarily for enlarged color prints, but you can also obtain color slides from the negatives. From KODACHROME-X or KODAK EKTACHROME-X, you obtain color slides, ready for projection. You can also have duplicate slides or enlarged color prints made from the original slides.

LOADING



1

Open the back of the camera by sliding the LOCK button down to pop open the hinged cover; then swing out the cover, as far as it will go, until it "click-stops" approximately perpendicular to the camera.



2

Place a KODAPAK Cartridge in the camera, as illustrated, with the larger cylindrical end down and toward the lock button.



3

Close the back of the camera by pressing the back against the body until it locks. The film name and number of exposures per cartridge appear in the WINDOW on the back of the camera. The film speed and flash guide number are now automatically set. (If the motor is wound, the first exposure positions itself immediately.)



4

Raise the black PULL-TAB, draw the winding tape straight out (as above); then, while still grasping the tab, allow the tape to return—repeat until the motor is fully wound (about 7 full strokes or until locked.)* This windup positions film for the first exposure and provides power to advance the film automatically for subsequent exposures. If an arrow shows in the window, the first exposure hasn't been reached, thus indicating insufficient windup. To get the maximum number of advances, wind the motor fully after exposure "1" is in place.

The number that appears in the center of the window on the back of the camera (shown above, right) serves as your exposure COUNTER. One or two of the same number may appear.

*After winding, make sure the pull-tab is fully seated in its recess; otherwise, film will not advance.

UNLOADING

1. After the last picture, the yellow paper will automatically move past the window, provided the spring motor has been wound sufficiently. If not and an "X" shows in the window, **before opening the back of the camera**, draw out the winding tape a few strokes to advance the yellow paper beyond the window.

2. Slide down the lock button; open the back.

3. Turn the camera over to allow the cartridge to fall into your hand. Close the back.

NOTE: Do not remove the cartridge from the camera until all the yellow paper, with the "Xs," has been moved past the window; otherwise several exposures will be "light-fogged." Removing and replacing partially-exposed cartridges, even under darkroom conditions, may result in loss of one or more exposures due to possible loss of tension on the cartridge take-up spool.



SHUTTER SPEED

Your camera has three manually adjustable shutter speeds—60 ($1/60$ sec.), 125, and 250 — plus $1/30$, which is automatically selected *for flash* by raising the flash reflector. A shutter speed of $1/125$ (125) is recommended for general daylight picturetaking; the faster speed (250) is useful to minimize the effect of subject or camera movement, while the slower speed (60) can be used for less favorable light conditions.

To select a shutter speed, rotate the knurled shutter speed DIAL so that the desired speed number clicks into place opposite the speed INDEX.

AUTOMATIC DAYLIGHT EXPOSURE CONTROL

The size of the lens opening is automatically controlled by the amount of light reflected to the ELECTRIC EYE by the scene. *Make sure that the electric eye is not obstructed during picture-taking by the fingers or any other object, and that the camera is not pointed directly toward the sun or other unusually bright light source.*

In weak light, when the lens opening has reached its largest opening ($f/2.8$), the shutter, regardless of the dial setting, automatically begins to reduce speed to give the correct exposure (as far as $1/30$, if necessary).

A warning SIGNAL will appear in the triangular section of the lower luminous frame in the viewfinder, *if there is insufficient light for a properly exposed picture.*

Unusual Situations: Because the electric eye reads the over-all brightness of a scene, better results sometimes can be obtained by altering the exposure when there is considerable brightness dif-




ference between the subject and the background. If you wish to give one stop more exposure for a dark subject against a larger light background, rotate and hold the knurled COMPENSATOR as far as it will go toward the plus (+) sign while taking the picture; for a light subject against a larger dark background, you can give one stop less exposure by rotating and holding the COMPENSATOR as far as it will go toward the minus (—) sign, during exposure. The compensator resets to normal *when released*. This exposure compensator can also be used with flash to give one stop more exposure for a dark subject, or one stop less for a light subject.

Also, in daylight pictures, when severe brightness differences occur between the subject and the background *and it is possible to get close to the subject*, you can exclude the background by moving up to a place where only the subject fills the finder. Then press down the shutter release, shown, page 13, about $\frac{1}{4}$ of the way (not far enough to release the shutter), continue to hold the release in this position to maintain the close-up exposure setting; then step back, aim, and press the release down fully to take the picture.



VIEWING AND FOCUSING

Hold the camera close to your eye with the eye centered on the rear eyepiece so that the complete luminous viewframe is visible. The image seen within this viewframe will be included in the picture, except at short camera-to-subject distances.* The two indicators (one on each side) near the top of the frame, and the one at the lower left, provide parallax correction at a subject distance of about 5 feet. Therefore, when the subject is at about this distance, aim the camera so that the subject image is within this smaller area, as outlined by the dotted lines in the illustration at left.

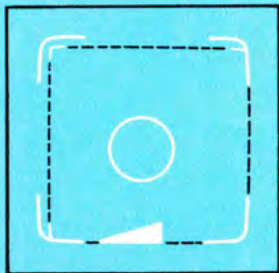

*Rangefinder and scale-focus distances are figured to the film plane of the camera. Use this point if measuring for close distances.

Top Illustration: Double image in rangefinder indicates out-of-focus subject.

Lower Illustration: Single rangefinder image means camera is properly focused.



Rangefinder Focusing—As you look through the viewfinder, you will also notice a circular area in the center of the field of view—this is the rangefinder field. Until the camera is focused for the correct camera-to-subject distance, this field shows a double image of the subject. To set the distance correctly, rotate the **LENS MOUNT** by its rim until the outlines of the double image move together and coincide, so that only one image is visible. The lens is now focused for the subject distance.

Scale Focusing—You can also focus by turning the lens mount until the figure representing the camera-to-subject distance in feet (or symbol for CLOSE-UP, GROUP, or SCENE) is opposite the focusing **MARK**.





OUTDOOR PICTURES

- Set the shutter speed. For general picturetaking, the shutter-speed setting may be left at 125.
- Focus the camera for the camera-to-subject distance by using the rangefinder, symbols, or the footage scale on the lens mount.
- View the subject, as illustrated, with your eye close to the rear opening of the viewfinder so that the subject is framed by the luminous viewfinder. *If the warning signal appears in the triangular area of the lower viewframe, there's not sufficient light for proper exposure.* However, flash can be used for close subjects.
- Hold the camera steady and take the picture by slowly pressing the SHUTTER RELEASE all the way down.
- With the spring motor wound, film advances automatically to the next frame when pressure is removed from the shutter release.

FLASH PICTURES

Your camera features automatic flash-exposure control—the correct lens opening is automatically set as you focus for the camera-to-subject distance.

- For color slides, use KODAK EKTACHROME-X or KODACHROME-X Film.
- For color prints, use KODACOLOR-X Film.
- For black-and-white prints, use KODAK VERICHROME Pan Film.


Flash Bulbs: Use AG-1B (blue) or AG-1 (clear) bulbs. For the correct color bulb with color films, follow the instructions packed with the film.



Batteries: Two *fresh* photoflash or flashlight, N-size, manganese alkaline batteries are required. Weak batteries may cause flash failures. To install batteries, first open the battery compartment on the bottom of the camera, as shown, by inserting the thumbnail in the notch, pressing in the direction of the arrow, and swinging open the hinged **COVER**. Make certain that battery and camera contacts are clean; then insert batteries—one base *down*, the other base *up*—as illustrated. Close the cover securely.

TAKING FLASH PICTURES

Use of the Flashguard, supplied with the camera, is recommended. After inserting the flashbulb, lower the guard over the reflector cover and press down firmly.

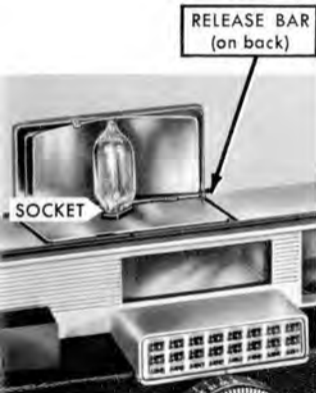

- **Raise Reflector**—Slide the black RELEASE BAR, located at the *top center of the back of the camera*, to the right. The flash cover and reflector will pop up into position.
- **Insert Bulb**—Insert an AG-1 type flashbulb by pressing it straight down into the SOCKET until it “clicks” into place. Never flash bulbs in an explosive atmosphere. To release a used bulb, slide the RELEASE BAR toward the right. Do not touch bulbs during or immediately after flashing — they are extremely hot.

- **Set Distance**—Rotate the lens mount until the two rangefinder images coincide, or until the figure representing the camera-to-subject distance in feet is opposite the focusing mark. Distance limit, 25 feet.
- **View Subject**—Look through the eyepiece and compose the picture within the luminous viewframe of the viewfinder.

NOTE: Disregard possible appearance of warning signal with flash pictures.

- **Take Picture**—Hold the camera steady and slowly press the shutter release to flash the bulb and take the picture.

AUTOMATIC FILL-IN FLASH

When flash is used in combination with available light (fill-in flash) the electric eye determines the lens opening on the basis of available light at 1/30 second, and the flash exposure control determines the lens opening on the basis of the distance setting in the 3 to 25 foot range. The smaller of the two openings is automatically set when taking the picture. At short subject distances or relatively low available light levels, fill-in flash will produce better lighted pictures, especially of side- or back-lighted subjects.

PHOTO AIDS

You can extend your picturing scope and enjoyment with the photo aids described below. See your Kodak dealer for these and others.

KODAK INSTAMATIC Field Case, Model C—This attractively lined, polystyrene case will provide maximum camera protection. The special drop front permits instant picture-taking without removing the camera from its case. A **KODAK INSTAMATIC Compartment Case** is available for carrying camera, film, bulbs, filters, etc.

KODAK Lens Attachments—A removable ring is provided on the front of the lens mount of your camera to retain a Series 5 KODAK Filter or other useful lens attachment. For example: A KODAK Skylight Filter (No. 1A) adds warmth to color pictures taken in the shade or on overcast days, and reduces bluish haze in landscape shots; KODAK Portra Lenses can extend the camera's picturing range down to 10 inches, portra lens-to-subject distance, with an approximate field size of $6\frac{3}{4} \times 6\frac{3}{4}$ inches.

Merely unscrew the ring on the front of the lens mount, insert a filter or other lens attachment; then screw the ring in place to hold the accessory.

KODAK Projectors—A KODAK Projector will show your color slides big, bright, and sharp on the screen. Ask your dealer to see the revolutionary, fully-automatic KODAK CAROUSEL Projector. Features round, 80-slide trays that change as quickly and easily as a hi-fi record. Other features include remote focus, remote forward slide change, remote reverse, instant editing, 500-watt power—everything to put ease and showmanship into your color-slide shows.

CARE OF THE CAMERA

Your KODAK INSTAMATIC is a fine, ruggedly built camera, but yet a precision instrument. Protect it from dust and dirt and avoid rough handling. Use a rubber syringe to blow out any dust that may accumulate inside the camera. If the lens needs cleaning, first brush or blow away any grit or dust, then wipe the surface gently with KODAK Lens Cleaning Paper. If necessary, use KODAK Lens Cleaner.

Do not attempt to make any repairs or remove any parts from the shutter, lens, or camera. Never oil the shutter or any other parts of the camera.

GUARANTEE

Within a year after purchase, any repairs necessary to this KODAK INSTAMATIC Camera due to a defect in materials or workmanship will be made or, at our option, the camera will be replaced without charge. No other warranty or guarantee, express or implied, shall be applicable to this equipment. Nor are we responsible for loss of film, for other expenses or inconveniences, or for any consequential damages occasioned by the equipment.

In case of a defect, the camera can be sent directly or through a Kodak dealer to Eastman Kodak Company or a repair firm authorized by us to make such repairs.* It should be accompanied by a description of the trouble encountered and other available information regarding the camera, including the date and place of purchase.

*Kodak service facilities, with addresses, are described on the following page.

EASTMAN KODAK COMPANY
Rochester, New York 14650

SERVICE FACILITIES

If your Kodak camera should require attention, complete service facilities are provided at Rochester and in Kodak Regional Sales Divisions at the addresses opposite. Also, service covered under the guarantee is available through independent service shops in many cities. For such local, guarantee-covered service, please see your Kodak dealer or refer to the yellow pages of your telephone directory under Photographic Equipment and Supplies—Factory Approved Warranty Service.

Eastman Kodak Company
Apparatus Service
343 State Street
Rochester, New York 14650

Eastman Kodak Company
Apparatus Service
1901 West 22nd Street
Oak Brook, Illinois 60523

Eastman Kodak Company
Apparatus Service
6300 Cedar Springs Road
Dallas, Texas 75235

Eastman Kodak Company
Apparatus Service
5315 Peachtree
Industrial Blvd.
Chamblee, Georgia 30005

Eastman Kodak Company
Apparatus Service
3250 Van Ness Avenue
San Francisco, California 94119

Eastman Kodak Company
Apparatus Service
1334 York Avenue
New York, New York 10021

Eastman Kodak Company
Apparatus Service
808 Rivera Road
Whittier, California 90606

Eastman Kodak Company
Apparatus Service
1065 Kapiolani Blvd.
Honolulu, Hawaii 96807

DETAILS

Film

- Film Size—KODAK No. 126 in the KODAK PAK Cartridge; 12- or 20-exposure.
- Negative Size—28 x 28mm.

Lens—38mm, f/2.8 KODAK EKTANAR

- Lens Openings—f/2.8 through f/64.
- Lens Attachments—Series 5. Ring supplied.

Shutter—Automatically set

- Speeds—1/60, 1/125, 1/250; also 1/30, set by exposure control and for flash.

Focusing and Viewing

- Rangefinder—Superimposed-image type, combined with viewfinder.
- Viewfinder—Optical, projected viewframe-type with parallax marks for 5 feet.
- Focusing Range—3 ft to infinity.
- Warning signal for insufficient light.

Automatic Film Advance

- Spring motor advances film—20 exposures, plus leader and trailer.

Automatic Daylight Exposure Control

- Film speed is set automatically by film cartridge (ASA 25 to 800).
- Lens openings set automatically by electric eye.
- Automatic shutter control reduces speed after maximum lens opening is reached.

Automatic Flash Control; Built-In Flashholder

- Guide number is set automatically by film cartridge (35 to 200).
- Correct lens opening is set by focusing.
- Flash shutter speed (1/30 sec.) is set automatically by raising reflector.
- Accepts AG-1 type flash bulbs.
- Uses 2 N-size manganese alkaline batteries.

Other Features

- Instant Loading and Unloading.
- Exposure Compensation.
- Tripod Socket.
- Eyelet for leather neckstrap (supplied).
- Die-cast metal body; black and satin chrome finish.

EASTMAN KODAK COMPANY • Rochester, New York 14650